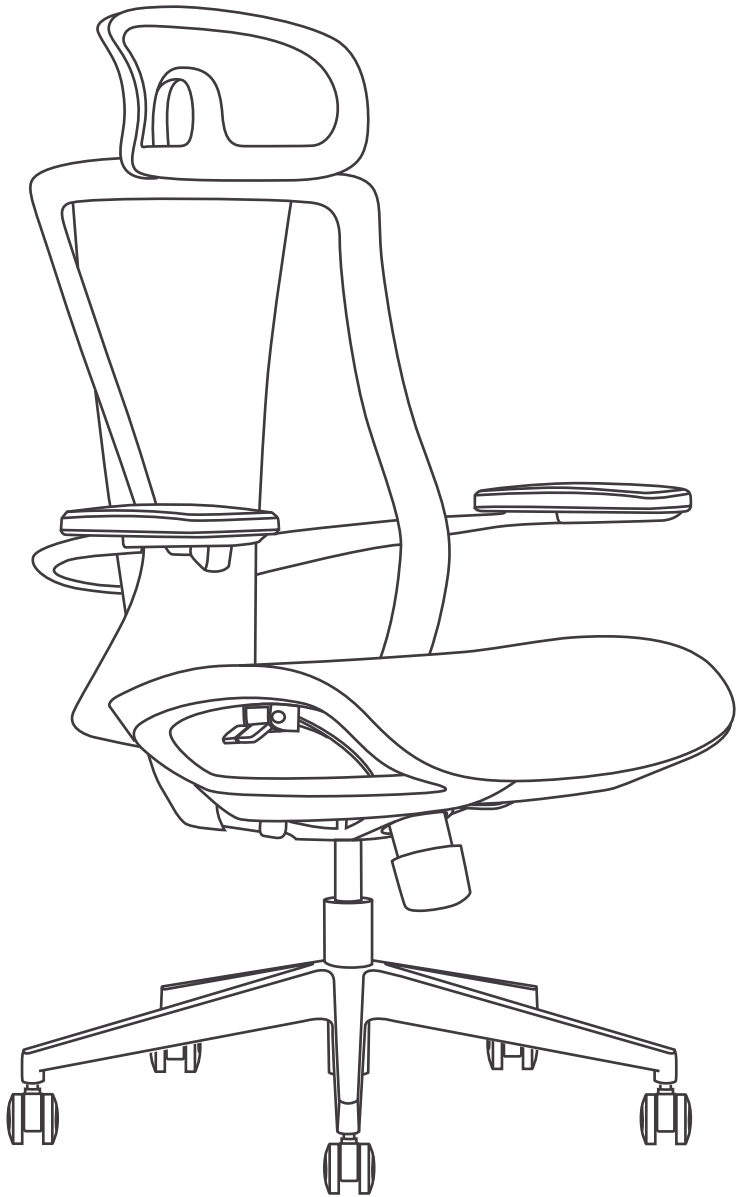






 

 
 

 


823A/B-GP

Installation guide



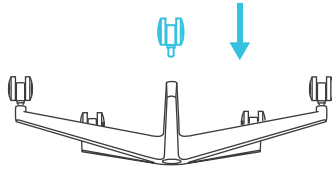
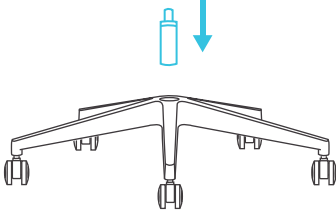
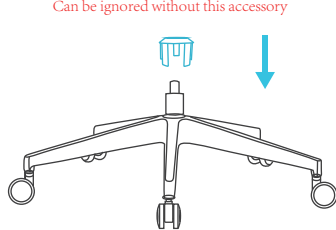
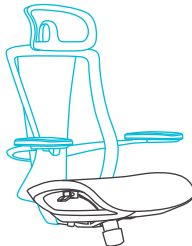

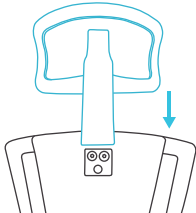
Parts list (Subject to actual size; each type of screws and washers has one spare)

General accessories				
	Five wheels	One gas rod	One backrest	A cushion
Optional accessories				
	Three (M8 gasket)	Three bullets (M8)	Three backrest screws (M8*45)	One hexagon wrenches
Optional accessories				
	Aluminum alloy high leg	Galvanized steel feet and foot covers	Aluminum alloy flat foot	
				
A headrest				

Note: Before installing the chair, please sort the screws and measure the length of the screws for installation



Installation icon (Subject to actual size)

		 <i>Can be ignored without this accessory</i>
<b>1</b> Press the wheel into the chair leg	<b>2</b> Put the air rod into the middle hole of the chair leg	<b>3</b> Put on the foot cover
		 <i>Can be ignored without this accessory</i>
<b>4</b> Use four M8*45 backrest screws + elastic media + spacers to connect the backrest and the chassis, pay attention to distinguish the front and back	<b>5</b> Align the upper half of the assembled chair and put it into the air rod	<b>6</b> Push the headrest down firmly, and the installation is complete
0 1 2 3 4 5 6 7 8 9 10 cm		

Note: Before installing the chair, please sort the screws and measure the length of the screws for installation